


DW 40v Pole Hedge Trimmer Lubrication Instructions

- After Extended Use, Lubrication in Gear Housing or on Blade may dry out
 - This only applies to the Professional Grade Hedge Trimmers we manufacture (not B+D, CM, or most other DW items)
- Users can add lubrication to 3 locations to ensure longer life of tool
 - 1) To Blades Directly
 - 2) To Chamber Where Blade is Secured
 - 3) To Gear Housing Chamber


Manual Page Describing Process

ENGLISH


Fig. N

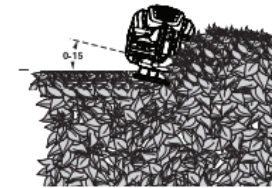

LEVEL HEDGES (Fig. O) – To obtain exceptionally level hedges a piece of string can be stretched along the length of the hedge as a guide.
Fig. O

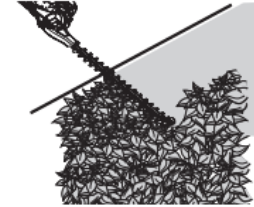

SIDE TRIMMING HEDGES (Fig. P) – Orient the trimmer as shown and begin at the bottom and sweep up.
Fig. P

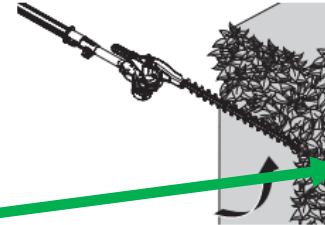

MAINTENANCE

WARNING: To reduce the risk of serious personal injury, turn unit off and remove the battery pack before making any adjustments or removing/installing attachments or accessories. An accidental start-up can cause injury.

WARNING: Remove battery pack before servicing, cleaning or removing material from the hedge trimmer.

Your DeWALT tool has been designed to operate over a long period of time with minimum maintenance.

Continuous satisfactory operation depends on proper tool care and regular cleaning.

Lubrication (Fig. A, Q)

Blades


1. After use, carefully clean the blades with a resin solvent.
2. After cleaning, apply a light film of lubrication to the exposed blade.
3. Turn the trimmer vertical with the blades toward the ground and run the trimmer for a few seconds to fully disperse the lubrication.

Gear Housing

1. With a grease gun, apply a good quality lithium based grease via the grease fitting **16** on the gear housing.

NOTE: Additional grease should be applied at 40 hour intervals or more frequently with heavy usage.

Fig. Q

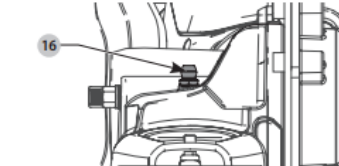

Replacing Blade (Fig. R, S, T, V)

WARNING: Sharp edges. Wear gloves when performing any maintenance on the trimmer blade.

Follow the instructions below to replace the blade **11** or bring the trimmer to a DeWALT factory service center, a DeWALT authorized service center, or other qualified service personnel. Always use identical replacement parts.


1. Remove battery.
2. Using a 4 mm hex bit, remove the four cover screws **17**.
3. Pry the cover **18** off by placing a flathead screwdriver under the back of the cover and twisting.
4. Remove the thin wear plate **19**. Remove the top connection rod **20** from the eccentric cam **21**.
5. Using a 4 mm hex bit, remove the blade screws **22** and washers.
6. Lift the front of the blade **11** to disengage it from the bottom connection rod **23** and pull the blade out of the trimmer.

Installing Blade

1. Install blade screws and washers **22** from the old blade into the hole in the new blade.
2. Line up the blade screws **22** on the new blade with their respective slots in the hedge trimmer head.
3. Mostly tighten the blade screws. Do not tighten fully. Slide the bottom blade **24** back and forth, and press down slightly until the blade catches the post **25** on the bottom connection rod **23**. Make sure the bottom connection rod is still in place.

DW 40v Pole Hedge Trimmer Lubrication Instructions

- 2) Chamber Where Blade is Secured
Unscrew these 4 screws,
remove blade cover and apply
directly with grease gun

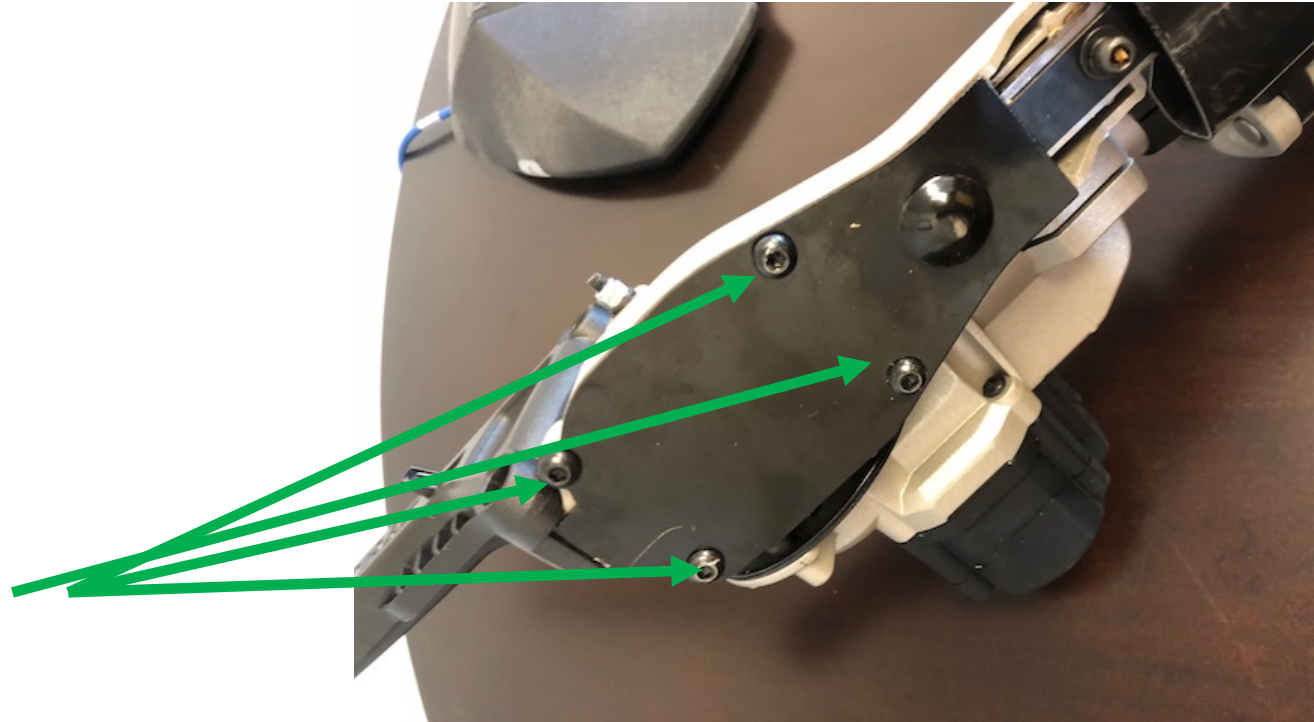

DW 40v Pole Hedge Trimmer Lubrication Instructions

3) To Gear Housing Chamber
Locate Gold Fitting on near Hedge
Trimmer pivot Point
Connect Grease Gun and Apply

